
Assembly Instructions


RLS-3MD-120 (60T / 70T)

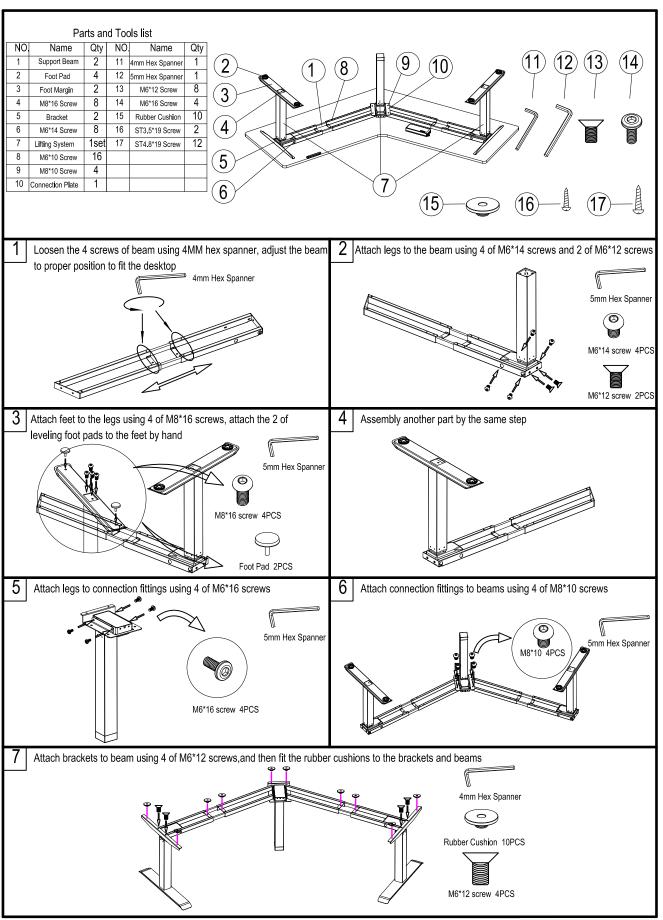



Assembly Instructions

RLS-3MD-120 (60T / 70T)

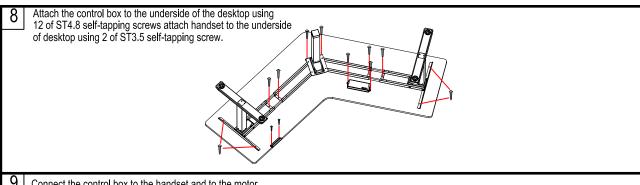

Connect the control box to the handset and to the motor

