
Assembly Instructions


RLS-3MD-90 (60T / 70T)

www.rlsystems.ca

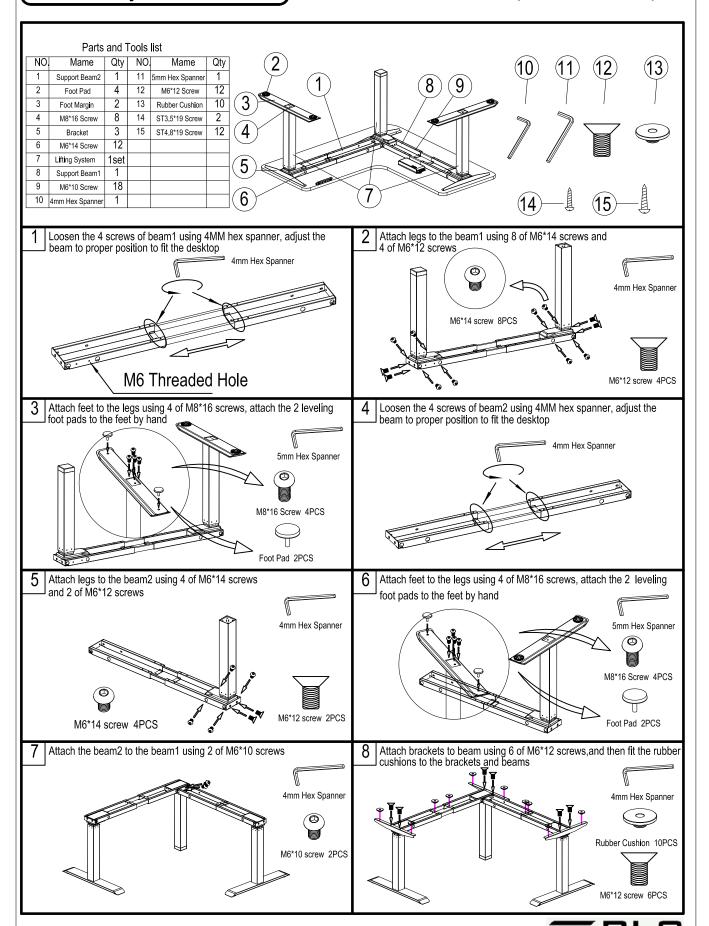

Assembly Instructions

RLS-3MD-90 (60T / 70T)

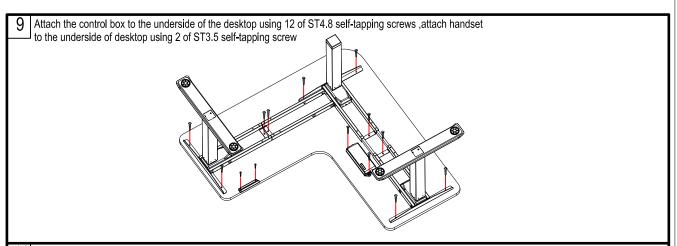

10 Connect the control box to the handset and to the motor

